
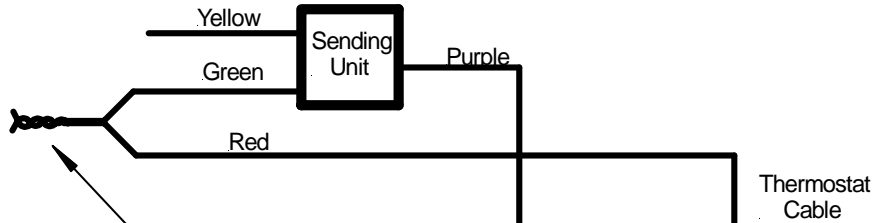


FAST-STAT Trouble Shooting Instructions

Steps 4 to 6 (of 6)

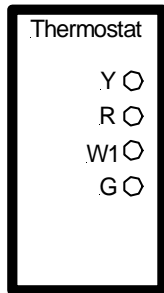

Step 5: Does the Sending Unit Work?

a) Disconnect the wires from the Sending Unit to the thermostat. Join the "R" wire from the thermostat cable & the Sending Unit Green wires together. Switch on the control circuit. The Fan should start.

b) Add the Yellow wire to the Red and Green. The Condenser should start running.

If the Fan, or Condenser does not run when performing the above tests replace the Sending Unit and Receiver. If OK then go to step 6.

Step 4:

Reconnect the purple wire to the thermostat cable

Step 6: Is the thermostat compatible with FAST-STAT?

a) Reconnect the wires from the Sending Unit to the thermostat. Switch on the control circuit. Set the Fan switch to "on" and the system switch to "off". The Fan should start.

b) Set the Fan switch to auto and the system switch to "cool". Adjust the temperature to call for cooling. The Fan and Condenser should start running (there may be a 5 min time delay on a cooling call)

If the Fan or Cooling does not run when performing the above tests then the thermostat is not compatible with FAST-STAT. You will need to use a different thermostat. If you encounter this problem please call our tech support line :

1-800-775-4750

