

FAST-STAT Model 7000 Installation Guide A

Heat Pump -2 Stage Cooling / 2 Stage Heat - Fossil Fuel
 Single Transformer
 Thermostat Requiring "C" connection
 4-Wire Thermostat Cable
 5-Wire Cable Between Heat Pump & Furnace

Start Up Instructions

The Model 7000 is polarity sensitive. The red wire from the Receiver has to be connected to the Red wire at the Sending Unit.

To check for correct polarity

After making all connections, set the thermostat to "off". Turn on the control wiring circuit. If the Reversing Valve and/or the Back-up Heat starts up, then switch the thermostat cable wires at the Receiver or at the Sending Unit.

