

FAST-STAT

Model 7000 Installation Guide B


Heat Pump -1 Stage Cooling / 1 Stage Heat - Electric Supplemental
 Single Transformer
 Thermostat Requiring "C" connection
 2-Wire Thermostat Cable
 4-Wire Cable Between Heat Pump & Fan Coil

Start Up Instructions

The Model 7000 is polarity sensitive. The red wire from the Receiver has to be connected to the Red wire at the Sending Unit.

To check for correct polarity

After making all connections, set the thermostat to "off". Turn on the control wiring circuit. If the Reversing Valve and/or the Back-up Heat starts up, then switch the thermostat cable wires at the Receiver or at the Sending Unit.

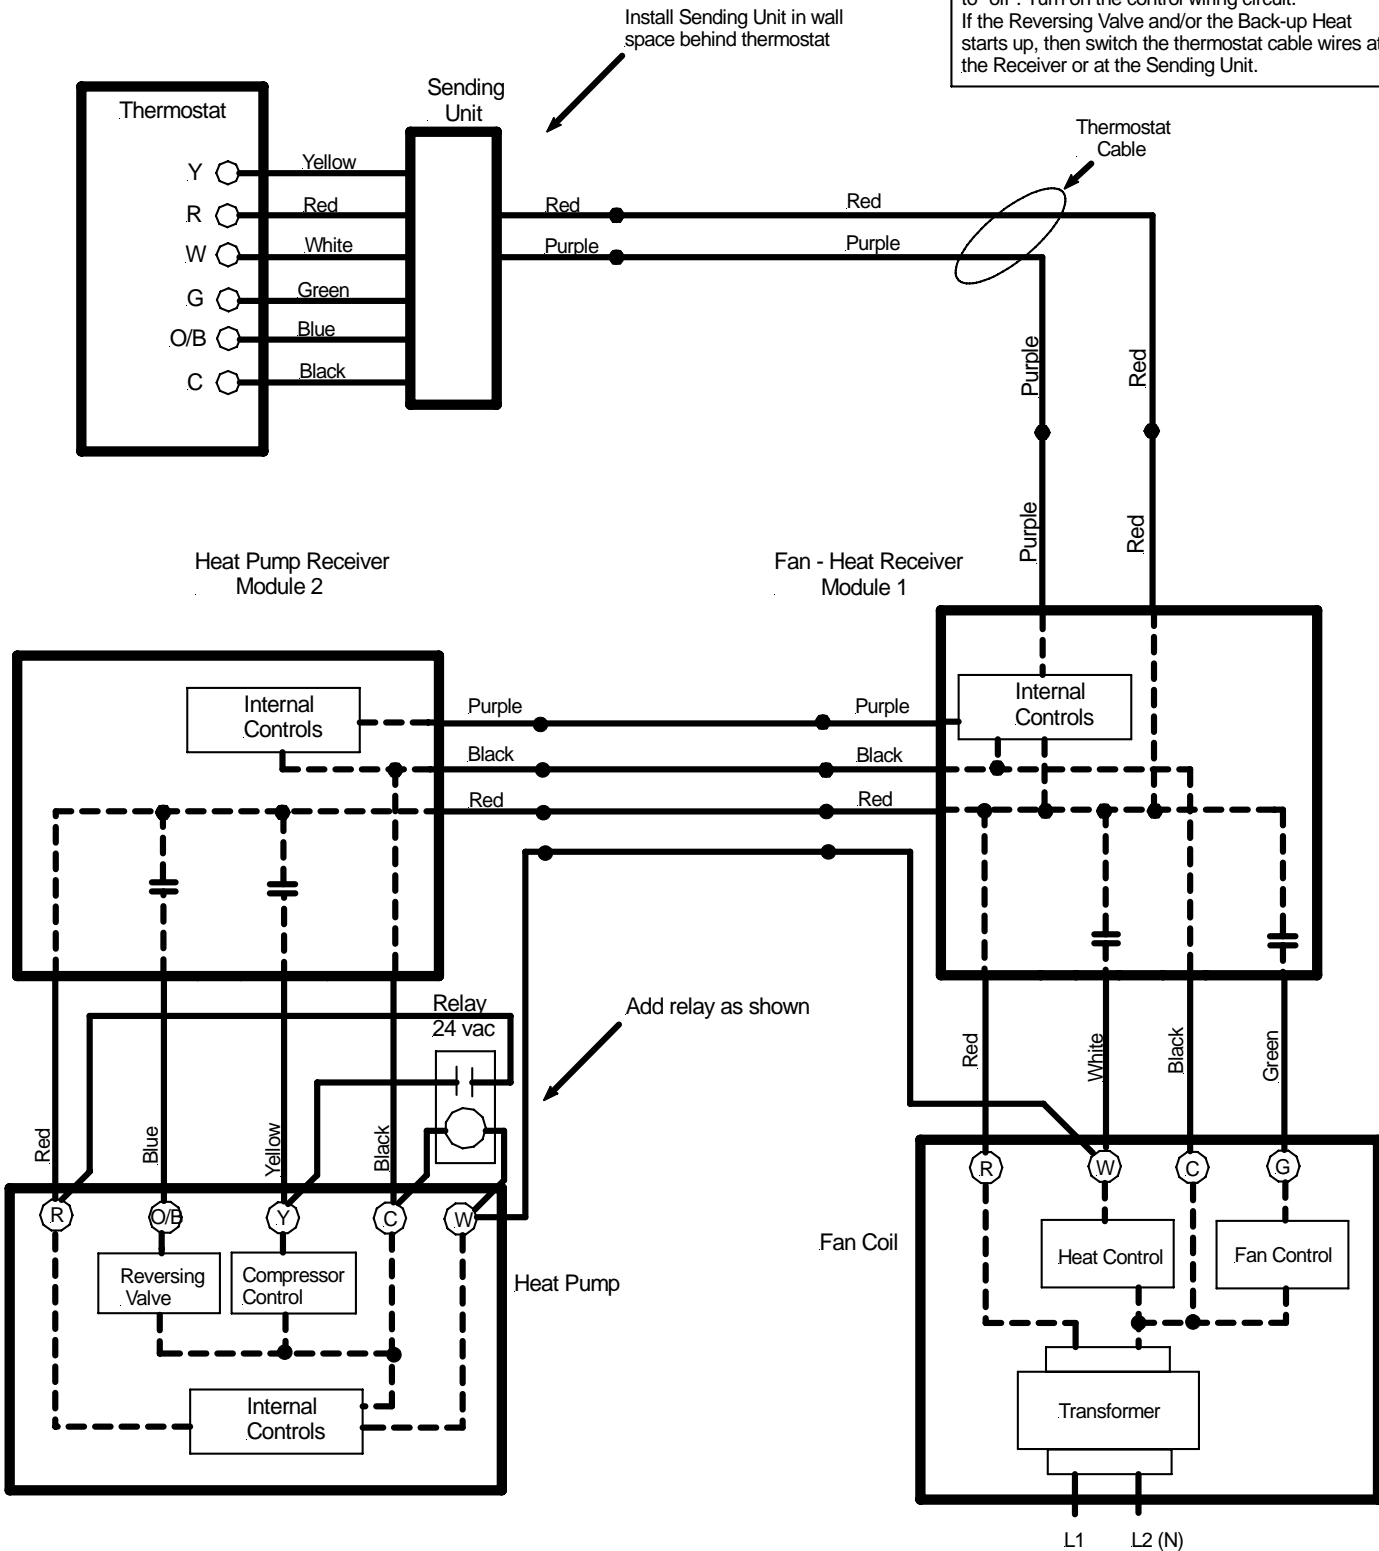

Install Sending Unit in wall space behind thermostat

Thermostat Cable

Heat Pump Receiver Module 2

Fan - Heat Receiver Module 1

Add relay as shown

Heat Pump

Fan Coil

L1 L2 (N)