


FAST-STAT Trouble Shooting Instructions

Model 1000 Steps 1 to 3 (of 6)

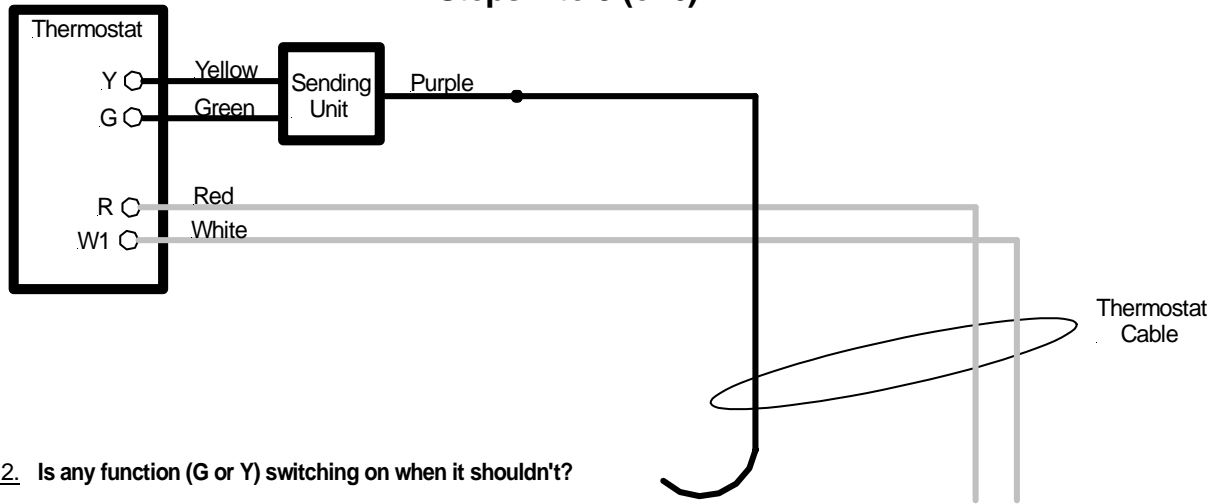

Step 2. Is any function (G or Y) switching on when it shouldn't?

Disconnect the wire from the thermostat cable.
Switch on the control circuit. The fan (green) and A/C (yellow) should remain off. If any starts then the Receiver has to be replaced. If OK go to step 3.

Step 3: Does the "quick test" work?

Switch on the control circuit.
Touch the Receiver purple wire to the Transformer "R" terminal on the furnace.
The fan and compressor should start.
If they do not start, replace the Receiver.
If OK go to step 4 (next page).

Step 1. Is the Receiver getting power?

Switch on control circuit and measure voltage at R & C.
There should be 20 to 28 volts ac at the Receiver's black & red wires. If OK go to step 2.

