FAST-STAT Installation Guide B

Model 1000 used to extend wiring to a 2-stage condenser.

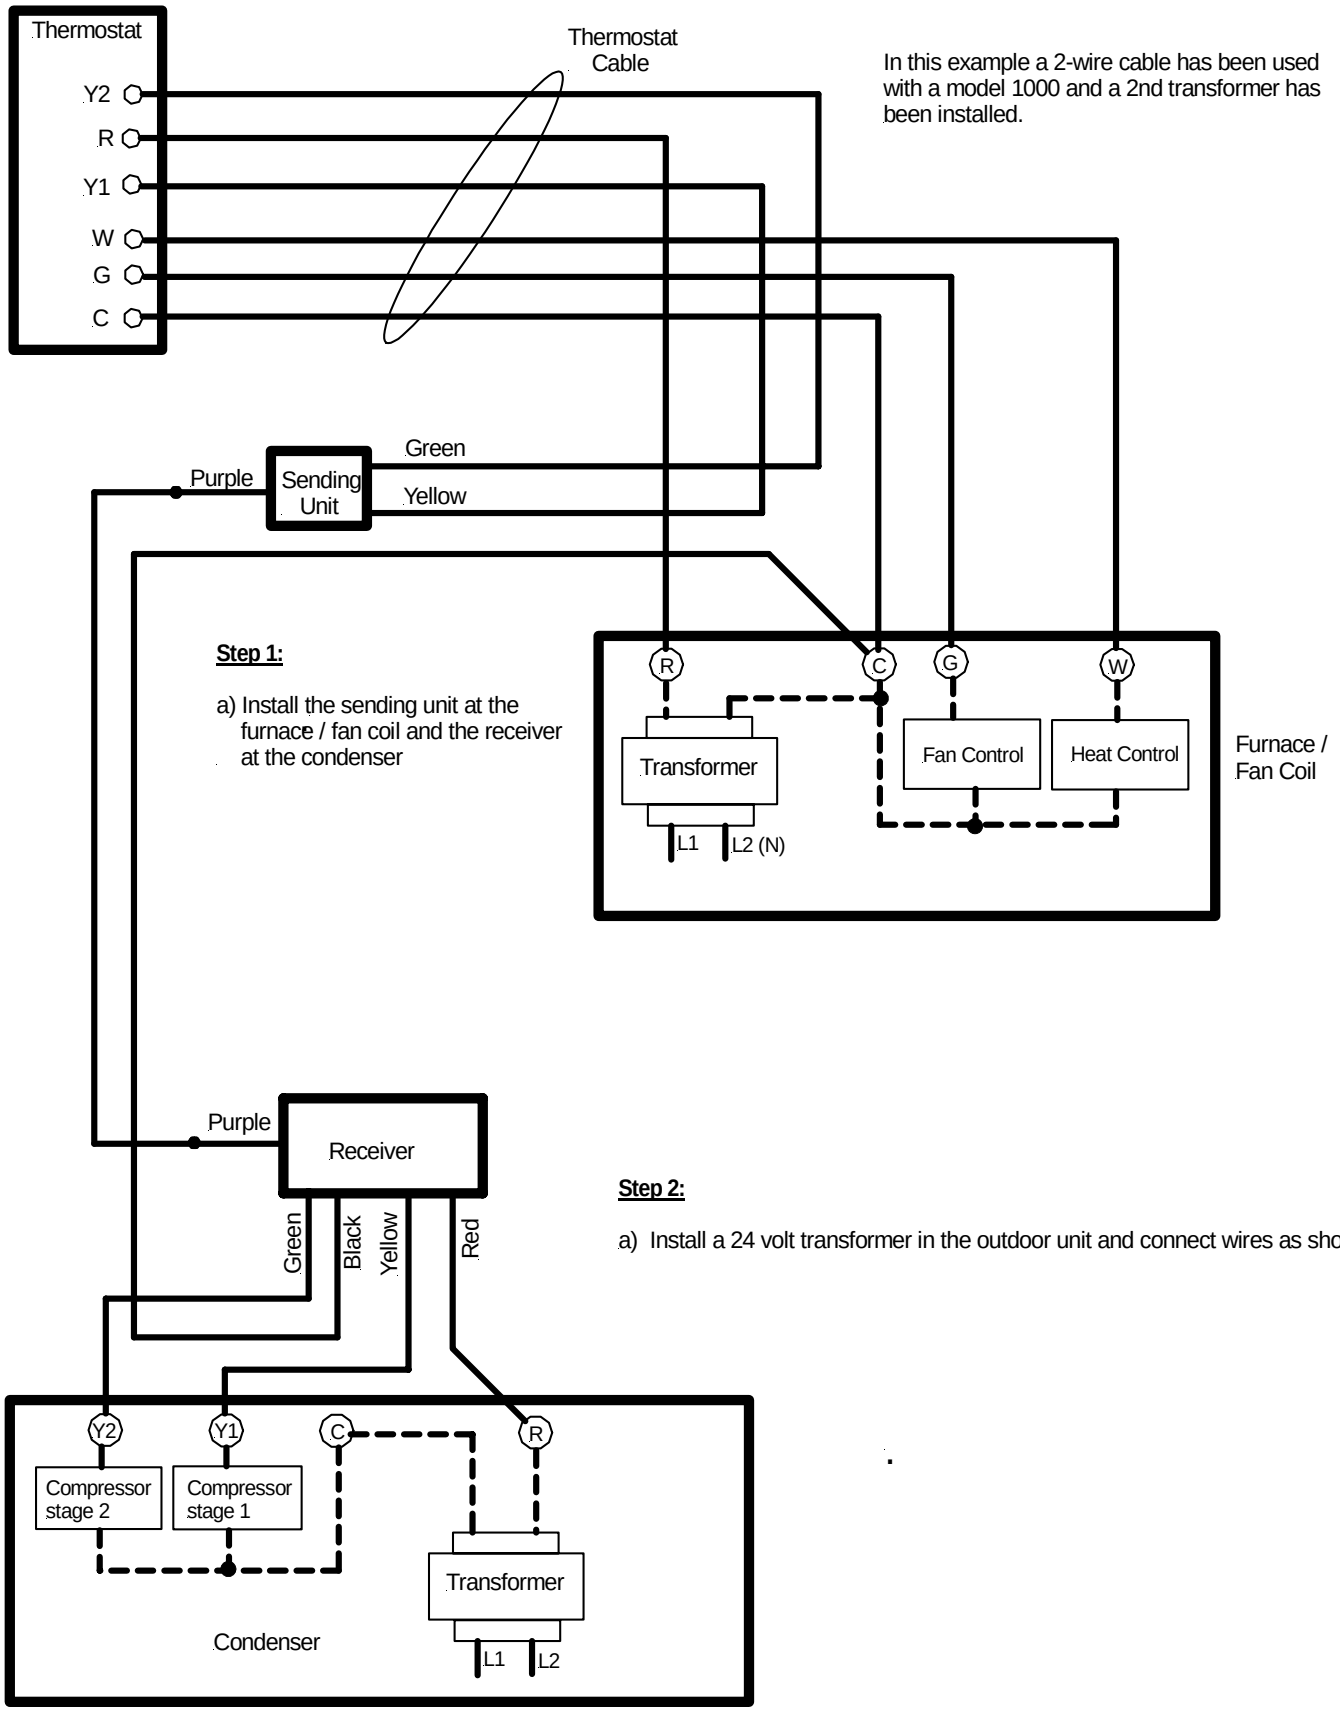

In this example a 2-wire cable has been used with a model 1000 and a 2nd transformer has been installed.

Step 1:

a) Install the sending unit at the furnace / fan coil and the receiver at the condenser

Step 2:

a) Install a 24 volt transformer in the outdoor unit and connect wires as shown.